

YFL7SWITCH

3/8" Flow Switch




SPECIFICATIONS

Operating Pressure:	5100 PSI
Max Pressure:	5650 PSI
Max Flow:	8.0 GPM
Activation Flow Rate:	Horizontal: 1.6 GPM Vertical: 2.4 GPM
Max Volts:	230 V
Max Amps:	3 Amp
Max Temp:	165° F
Port Sizes:	Inlet: 3/8" BSP-F Outlet: 3/8" BSP-F
Dimensions:	4.4" x 3.3"
Weight:	0.86 lbs.
Materials:	Brass, Stainless Steel, Buna-N, Plastic

*May not be used for starting motors, will not handle start-up current.

PARTS LIST

No.	Part No.	Description	Qty.
1	Y28051823	Probe with 48" Cord	1
2	Y28040431	Coupling, M22 x 15.6	1
3	Y10306601	O-ring, 1.78 x 15.6	1
4	Y28040651	Spring, 0.4x8.4x33, SST	1
5	Y28041023	Magnetic Shuttle	1
6	Y28040884	Cover	1
7	Y28040131	3/8" F BSP Body	1
8	Y16302118	Self Tapping Screw, 2.6x16	1

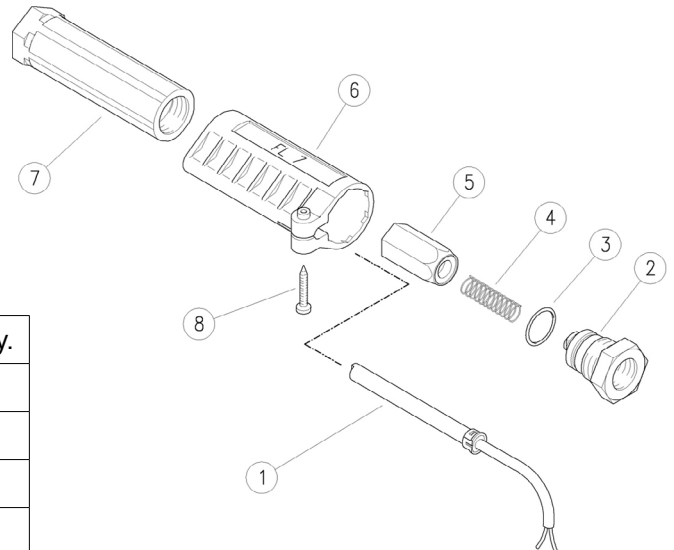


General Pump
is a member of
the Interpump Group



Ref 300335 Rev D
11-21



DIMENSIONAL DRAWING

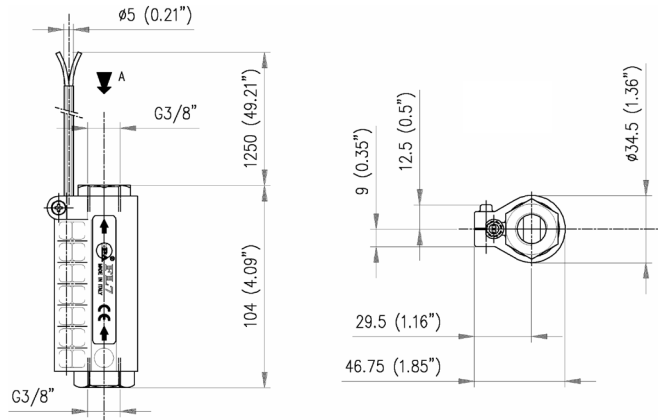

INSTALLATION

The flow switch detects the presence of water flow on the inside of the system by means of a piston which is shifted by the water itself. When the piston is moved by the water flow, the magnets contained internally stimulate a reed switch that closes the electric circuit. Can be installed horizontally or vertically. The water flow has to be directed as per the direction of the arrows inscribed on the plastic casing of the flow switch.

ELECTRICAL

For the connection of the electric circuit, see **Fig. 1**. In order to prevent damage it is necessary to install adequate protections for the system. There are many circuits to choose from, one of the most effective is seen in **Fig. 2**.

<p>N.A.</p> <p>fig 1</p>	<p>$I = (A = \text{Ampere})$ $V = (V = \text{Volt})$</p> <p>Inductive Load</p> <p>$C = I^2 / 10 \text{ (}\mu\text{F)}$ $R = V / (10 \times I^2) \text{ (}\Omega\text{)}$ $\alpha = 1 + (50 / V)$</p> <p>fig 2</p>	<p>Example of Inductive Load Working Data 230V-0.5A</p> <p>$C = I^2 / 10 \text{ (}\mu\text{F)} = 0,5^2 / 10 = 0,025 \mu\text{F}$ $\alpha = 1 + (50 / V) = 1 + (50 / 230) = 1,2$ $R = V / (10 \times I^2) \text{ (}\Omega\text{)} = 230 / (10 \times 0,5^{1,2}) = 53 \Omega$</p>
	<p>Resistive Load</p> <p>$R = V / I \text{ (}\Omega\text{)}$</p>	<p>Example of Resistive Load Working Data 230V-0.5A</p> <p>$R = V / I \text{ (}\Omega\text{)} = 230 / 0,5 = 460 \Omega$</p>

PROBLEMS & SOLUTIONS

Problems	Probable Causes	Solutions
The piston does not move	Unsufficient flow	Check for supply and restriction to flow
	Faulty assembly	Re-assemble considering the flow direction
	Foreign material on the piston	Clean and install a filter
Electric signal missing	Reed Damaged	Replace and install a protection circuit
	Dissconnected wires	Check and re-set connections
	Electric probes out of phase or dispaced	Check and re-set probe

MAINTENANCE

Every 400 working hours or 10,000 cycles, check the magnetic pin (item number 5 in the exploded view) and clean.